




Supplemental Instructions for Multi-Wide Vinyl Revive Installation

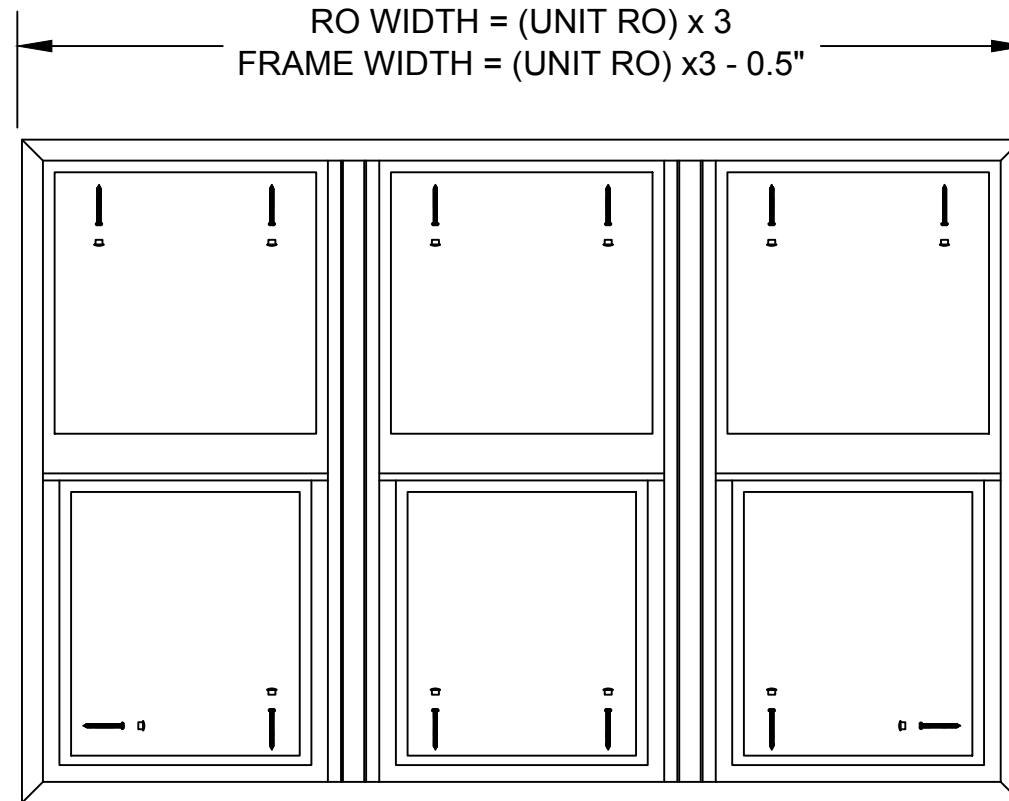

- 1.) Follow steps 1-2A from the Revive Installation Guidelines.
- 2.) Inspect sill of opening to ensure that it is sturdy and has no leakage points.
- 3.) Follow step 3 from the Revive Installation Guidelines. A multi-wide replacement window will require additional screws as shown above for a single hung configuration.
- 4.) After securing the sill, make sure to entirely cover the screw heads with silicone sealant before applying the hole cap.
- 5.) Follow the remaining instructions on the Revive Installation Guidelines.